

## What to do if...

## What to do if...



A tire punctures

P. 408 If you have a flat tire



The engine does not start

P. 418 If the engine will not start

P. 70 Engine immobilizer system

P. 421 If the vehicle battery is discharged



The shift lever cannot be moved out

P. 419 If the shift lever cannot be shifted from P



The engine coolant temperature gauge enters the red zone

P. 424 If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 420 If you lose your keys



The battery runs out

P. 421 If the vehicle battery is discharged



The doors cannot be locked

P. 27 Side doors

P. 32 Back door



The horn begins to sound

P. 72 Alarm



The vehicle is stuck in mud or sand

P. 426 If the vehicle becomes stuck



The warning light or indicator light comes on

P. 397

If the warning light turns on



■ Warning lights



Brake system warning light

or



P. 397



Malfunction indicator lamp

or



P. 398



"ABS" warning light

or



P. 398



Driver's seat belt reminder light

P. 400



Front passenger's seat belt reminder light

P. 400



Low fuel level warning light

P. 400



Rear light failure warning light

P. 398



SRS warning light

P. 398



Low engine oil pressure warning light

P. 398



Open door warning light

P. 400



Tire pressure warning light

P. 400



Charging system warning light

P. 398



Automatic headlight leveling system warning light

P. 398



Automatic transmission fluid temperature warning light

P. 398



Low washer fluid warning light

P. 400



Dynamic laser cruise control master  
warning light

P. 163



Engine oil replacement  
reminder light

P. 400